

INSTALLATION MANUAL

VERSE G2 Architecture Cylinder

IMPORTANT SAFETY INSTRUCTION

Read this installation guide prior to attempting installation. Always turn OFF the main power before starting your installation. Consult a qualified electrician before installation. Installation should be carried out by a qualified electrician.

During installation, basic safety precautions should always be followed, including the following listed.

1. Do not install the lighting system in a wet location.
2. Ensure the appropriate connectors match the luminaire fixture
3. Do not install any part of the luminaire less than 5 feet above the floor.
4. Do not install any luminaire assembly closer than 5 inches from any window treatments, i.e., curtain, blinds or any similar combustible type material.
5. Do not attempt to energize anything other than the luminaire fixtures.
6. To reduce the risk of fire and electric shock, do not attempt to connect to power tools, extension cords, appliances, or the like, to the track.
7. Maintenance of the luminaires should be performed by person(s) familiar with the luminaires construction and any hazards involved. Regular fixture maintenance programs are recommended.
8. Do not exceed the nominal supply voltage or amperage ratings.
9. Turn the power OFF at the fuse or circuit breaker box before doing any installation or maintenance activities.
10. Wear rubber soled shoes and work on a sturdy wooden or non-conductive ladder.
11. The lighting product must be mounted in locations and at heights in compliance with the National Electrical Code and with local building codes. Installing contrary to instruction may cause unsafe conditions.
12. To avoid hazards to children, take accountability for all parts and dispose all packing materials properly.

13. It may be necessary to clean the refractor / lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to the user. Refractor / lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry. Should optical assembly become dirty on the inside, wipe refractor / lens and clean in above manner, replacing damaged gaskets as necessary.
14. Call the Technical Support department about any installation questions.
15. Do not install a damaged product. This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
16. These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation or maintenance. Should further information be desired or particular problems arise, not covered sufficiently for the purchaser's or owner's purposes, please contact the Technical Team.



CAUTION


This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition of the National Electrical Code (NEC) and all applicable state and local building codes. The final installation must be approved by the appropriate, qualified electrical / building inspector(s). Improper installation may result in a fire or electrical hazard. Ensure the electrical power to the circuit has been disconnected before installing the electrical system.



WARNING


- Risk of fire. Most dwellings built before 1985 have supply wire rated at 60°C.
- Consult a qualified electrician before installation.
- Properly ground electrical enclosure.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Use only UL approved wire input/output connections. Minimum size 18 AWG or 14 AWG if there are any continuous runs.
- If the fixtures are connected in a continuous run, do not exceed allowable number of fixtures in series/power in continuous runs.
- Inrush currents must be taken in account by the electricians to account for proper circuit design.

A1(SC=5" standard canopy for recessed J-box
DC=5" canopy for surface mount J-box
with conduit cover)

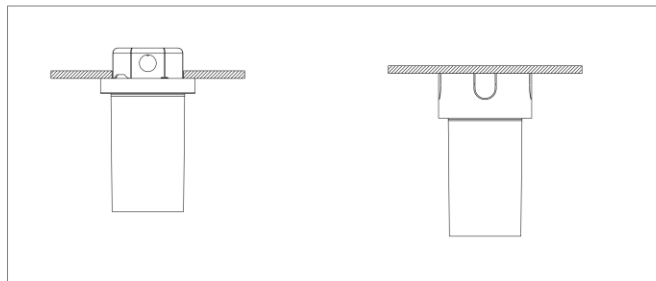


Installation Kits

1、Canopy 1PCS



3、Mounting Bracket 1PCS



5、8#-32 Screws 2PCS



7、Wire rope 1PCS



2、Canopy 1PCS




4、P3 Wire Nuts 5PCS




6、M4*12 Screws 1PCS




8、M4*6 Screws 1PCS

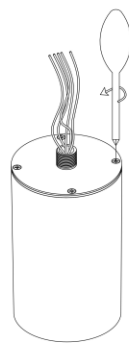


1.Using a screwdriver, remove the screws and the back cover from the fixture. Set them aside for later use.

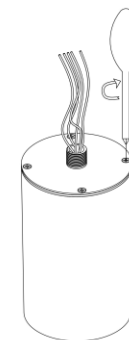


3.Reattach the back cover to the fixture using screws

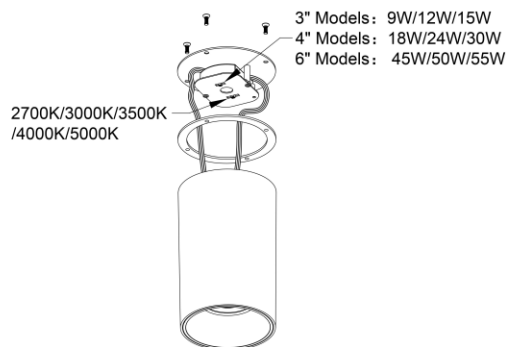


2.1. Set the CCT and wattage to the desired settings.later use.

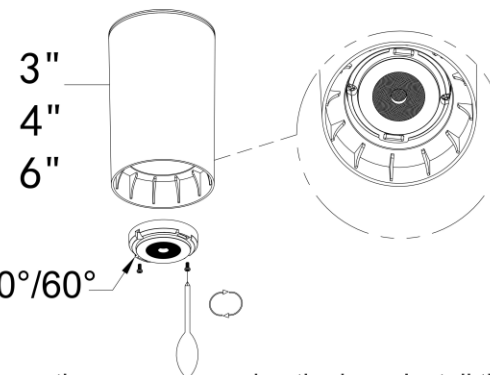


4.1.Remove the screws securing the lens. Install the selected lens onto the fixture and secure it with screws.

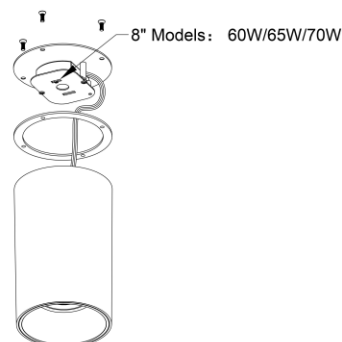


2.2.Set the wattage to the desired setting.later use.

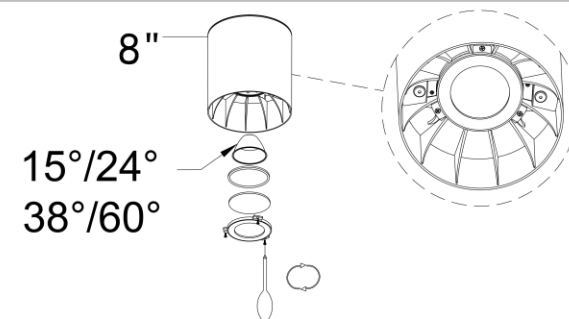


4.2.Remove the screws securing the glass cover. Install the selected reflector onto the light engine bracket, then reinstall the glass cover and secure it with screws.

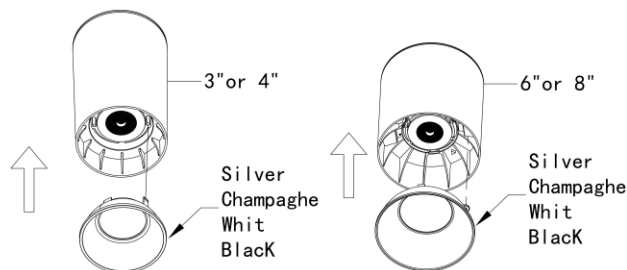


5. Replace the anti-glare cover as follows: For 3" and 4" models: Snap the anti-glare cover into the slots on the lens. For 6" and 8" models: Align the magnets on the anti-glare cover with the metal plate inside the cylinder to secure it in place.




6. Low canopy: Recessed J-box Deep canopy: Surface-mounted J-box

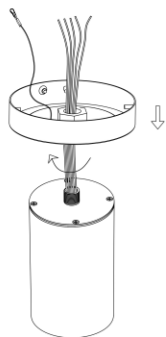


7. Thread the canopy onto the back cover nipple and tighten

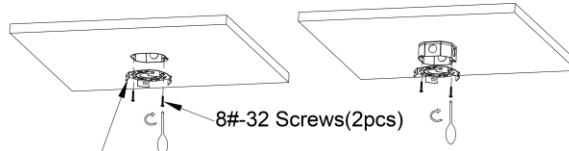


8. Secure the J-box using the provided Mounting Bracket.

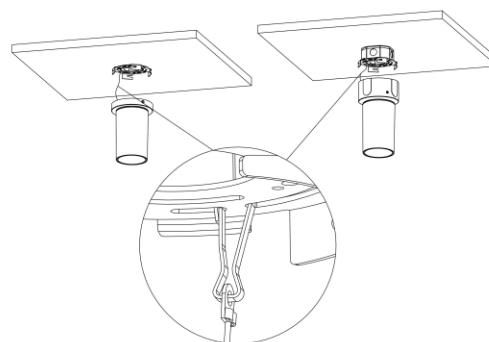


9. Attach the mounting clip to the Mounting Bracket.

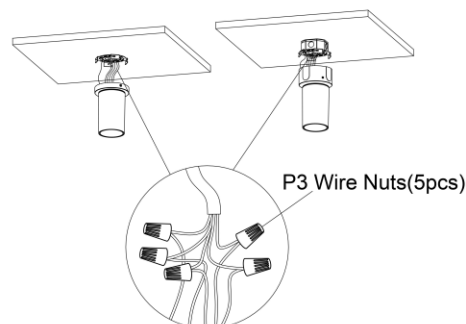

10. Secure the AC supply wires from the fixture using the provided P3 wire nuts and place them inside the canopy. Connect the wires as follows: Line (L) to black, Neutral (N) to white, Ground (GND) to green, DIM+ to purple, and DIM- to pink.

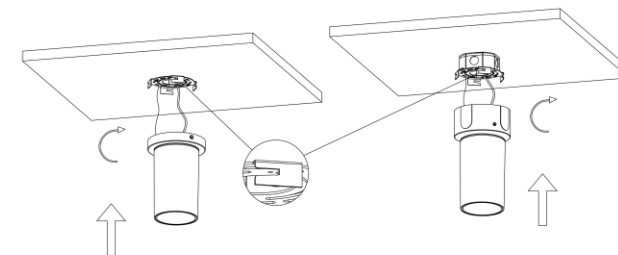


11. Rotate the fixture and lock it into the slots on the mounting bracket

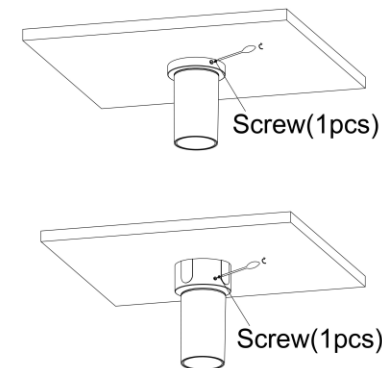


12. Secure the canopy with M4x12 screws.

A2(SC=Canopy with Recessed J-Box + Stem Pendant Kit) or DC=Conduit Cover Canopy with recessed J-box + Stem Pendant Kit

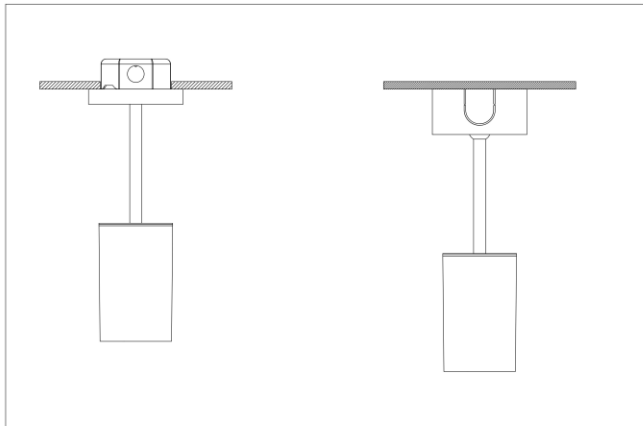


Installation Kits

1、 Canopy 1PCS




2、 Canopy 1PCS



3、 P3 Wire Nuts 5PCS



4、 Mounting Bracket 1PCS



5、 Wire rope 1PCS



6、 Stem 1PCS




7、 M4*12 Screws 1PCS




8、 8#-32 Screws 2PCS




9、 M4*6 Screws 1PCS

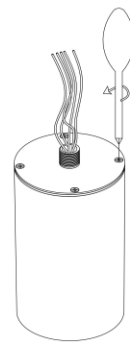


1. Using a screwdriver, remove the screws and the back cover from the fixture. Set them aside for later use

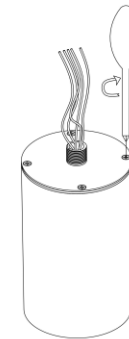


3. Reattach the back cover to the fixture using screws.

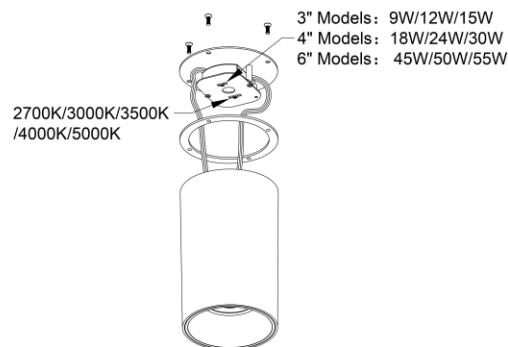


2.1. Set the CCT and wattage to the desired settings. later use.

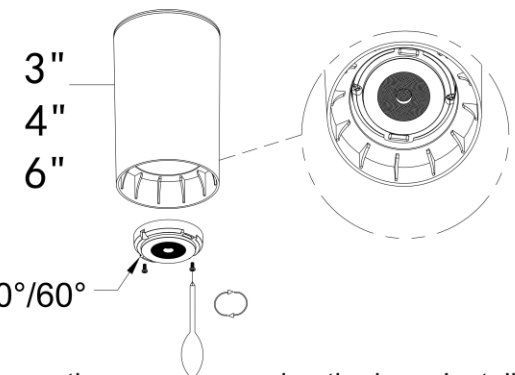


4.1 Remove the screws securing the lens. Install the selected lens onto the fixture and secure it with screws.

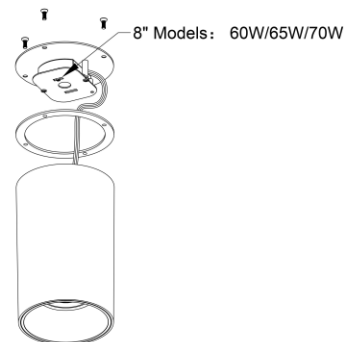


2.2. Set the wattage to the desired setting. later use.

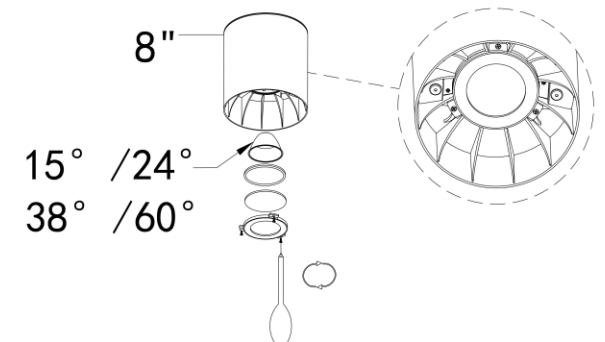

4.2. Remove the screws securing the glass cover. Install the selected reflector onto the light engine bracket, then reinstall the glass cover and secure it with screws.

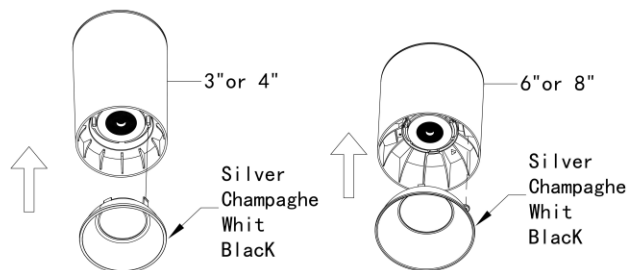


5. Replace the anti-glare cover as follows: For 3" and 4" models: Snap the anti-glare cover into the slots on the lens. For 6" and 8" models: Align the magnets on the anti-glare cover with the metal plate inside the cylinder to secure it in place.




Regular Canopy Kit

Deep Canopy Kit


6. Low canopy: Recessed J-box Deep canopy: Surface-mounted J-box

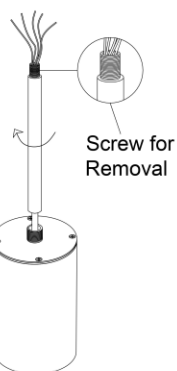

7. Thread the stem onto the threaded nipple on the back cover, then tighten securely

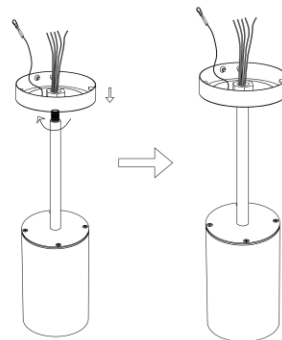


8. Thread the canopy onto the threaded nipple on the stem

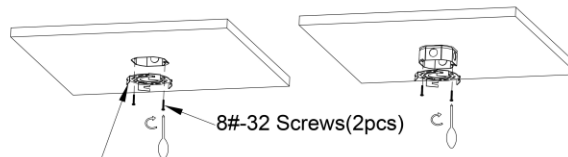


Mounting Bracket


9. Secure the mounting bracket to the J-box with screws.

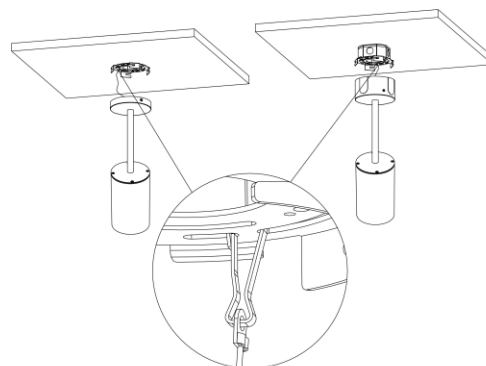


10. Attach the mounting clip to the Mounting Bracket.

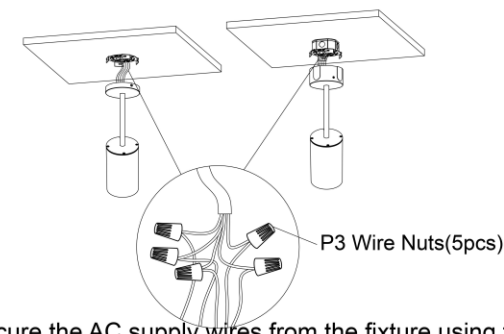

10. Secure the AC supply wires from the fixture using the provided P3 wire nuts and place them inside the canopy. Connect the wires as follows: Line (L) to black, Neutral (N) to white, Ground (GND) to green, DIM+ to purple, and DIM- to pink.

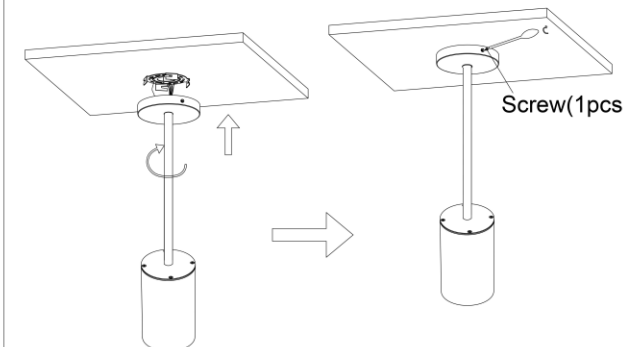

11.1. Twist the canopy into the slots on the mounting bracket, then secure it with M4×12 screws

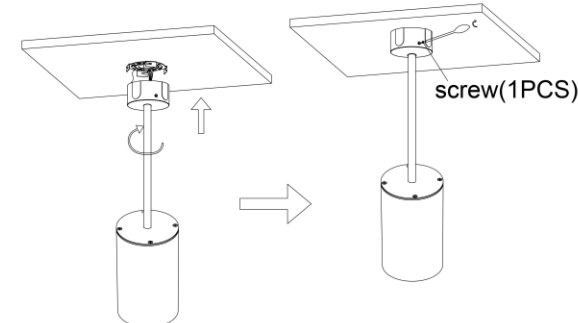

11.2. Twist the canopy into the slots on the mounting bracket, then secure it with M4×12 screws.